


Instructions

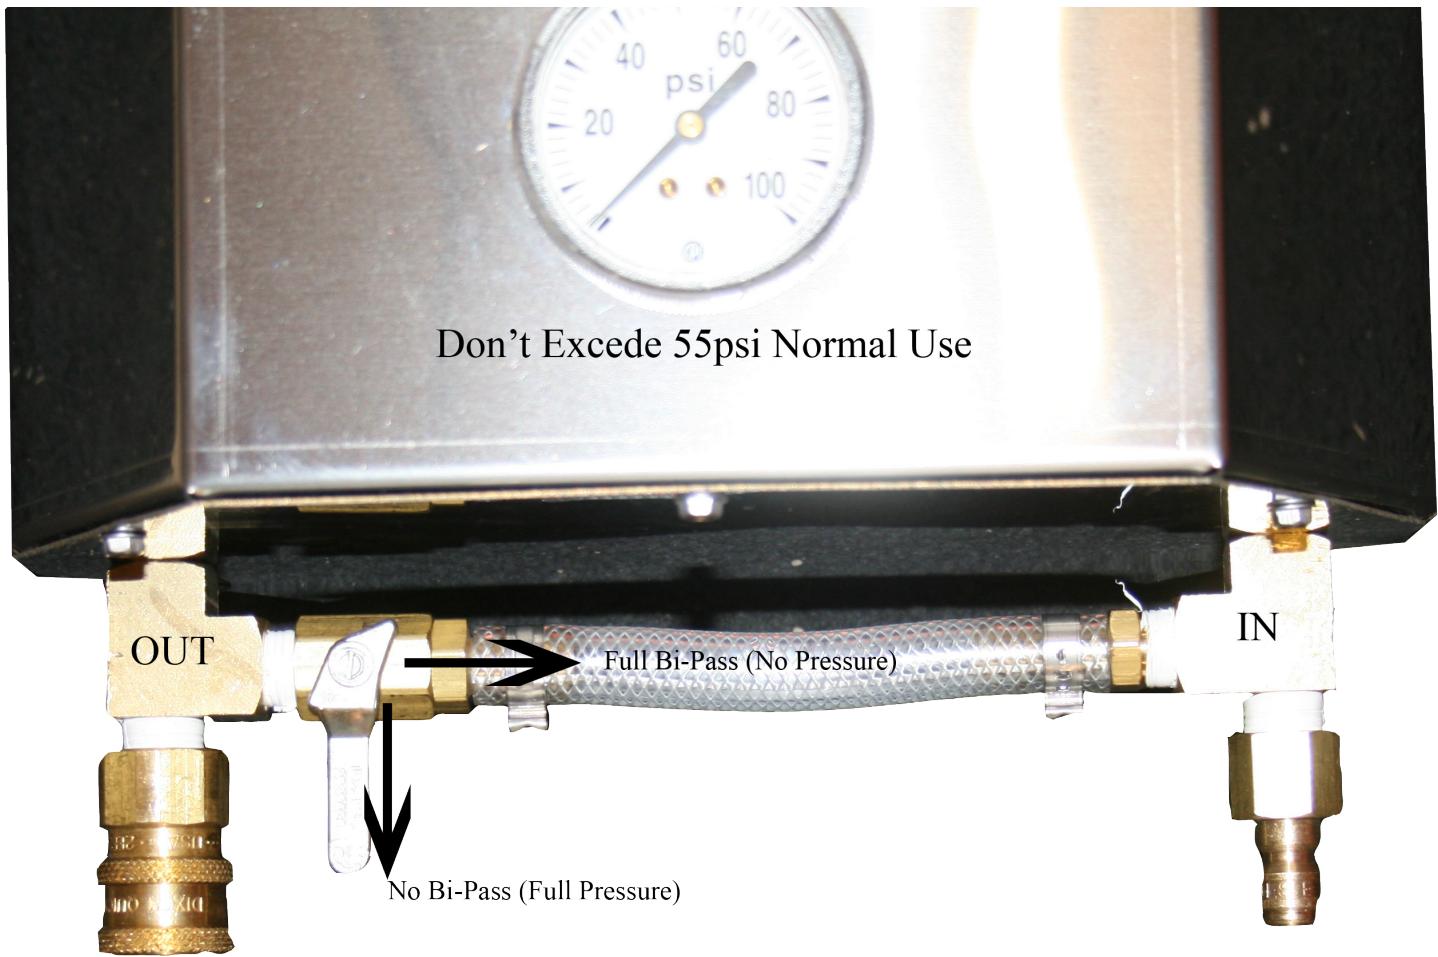

Priming:

Connect hose to shank and put inlet hose in bucket with water. Turn bi-pass to No Bi-Pass (Full Pressure) as show in picture above. Once primed move lever back to reduce pressure to desired pumping pressure for the system.

During Winter:

Remove water from pump to ensure pump does not freeze, a frozen pump will void warranty.